hunter

www.hunterbharat.com

# Hunter 4K HDMI 4x4 Matrix with Audio, IR & RS232

9494-HUC-M44A-4KV2.0

User Manual



#### **Product Introduction**

Hunter HDMI matrix 4x4 can connect 4 HD signal sources to 4 HD display terminals with optical fiber and stereo headphone output at the same time via HDMI out 1 port. The matrix allows four HDMI devices to be switched or split easily to four HDMI compatible monitors or projectors.

Hunter HDMI matrix support lossless transmitting and are widely used in space and security concerns, data center control, information distribution, conference room presentation, school and corporate training environments.

#### **Features**

- Very compact structure
- Stable and reliable
- Via HDMI out1, support 3.5mm earphone jack and optical output at same time
- Economical and cost-effective
- Support 3D
- Support IR Remote Control
- Support RS232 Control
- The four outputs could show the same or different source simultaneously.





HDMI resolution

Support video format

Support audio format

Max baud rate

Input cable distance

Output cable distance

**HDMI** Input

**HDMI Output** 

Max working current.

Power adapter format

Operating Temperature range

Operating Humidity range

Dimension (L x W x H)

Weight

up to 4K/60Hz

8/10/12 bit deep color

DTS-HD/Dolby-trueHD/LPCM7.1/DTS/Dolby-AC3/DSD

4K/30Hz ≤15M AWG26 HDMI standard cable 4K/60Hz ≤5M HDMI 2.0 standard cable 4K/30Hz ≤15M AWG26 HDMI standard cable 4K/60Hz ≤5M HDMI 2.0 standard cable

4

0.8A

Input: AC (50HZ, 60HZ) 100V-240V; Output: DC12V/1A


(-15 to +45°C)

5 to 90%RH (No Condensation)

276x143x26 (mm)

720g

### Function Interface Figure:

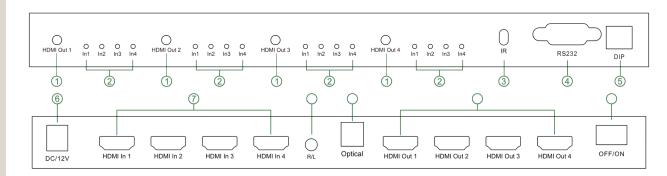

1: HDMI Out1-4 - Output selection

2: In1-4 - Input LED indicator for each output selection

3: IR - IR port

4: RS232 - RS232 port

5: DIP - EDID

6: DC/12V - DC/12V power port

7: HDMI In1-4 - HDMI Input 1-4 port

8: R/L - 3.5MM headphone interface

9: Optical - Optical port

10: HDMI Out1-4 - HDMI Output 1-4 port

11: OFF/ON - Power switch






Noted: the dial switch to dial downward is 1, dial upward is 0.

Position1	Position2	Position 3	Position 4	Function
0	0	0	0	Copy EDID from Output1
0	0	0	1	3D 4K 60HZ 7.1CH
0	0	1	0	3D 4K 30HZ 2CH
0	0	1	1	3D 4K 30HZ 7.1CH
0	1	0	0	2D 1080P stereo 2CH
0	1	0	1	2D 1080P 7.1 CH
0	1	1	0	3D 1080P stereo 2CH
0	1	1	1	2D 1080P DVI

#### **Remote Control Settings**




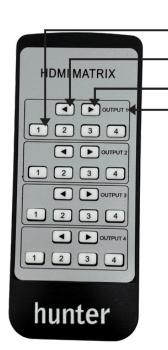

- ①Switch to one specific Input port
- ②Return to last Input port
- ③Move forward one Input port
- 4Output port

4x4 matrix supports IR control and there are four sets of control button to use to switch & control the four Output ports; ②、③ are used to move back or forward one Input port; ① is used to directly switch to one Input port.



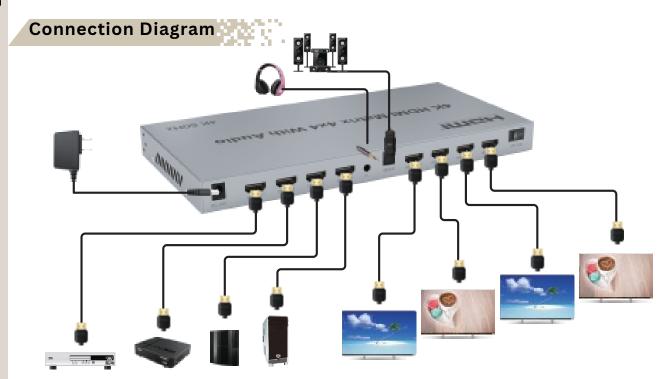

#### **Operating and Connecting**

- 1. Connect each HDMI source devices and input of HDMI Matrix with HDMI cable.
- 2. Connect display devices and output of HDMI Matrix with HDMI cable.
- 3. Connect the audio output to the stereo amplifier via stereo headphones or optical fiber.
- 4. Connect 12V power supply to the HDMI 4x4 Matrix.
- 5. Use the IR remote or button control to switch the signal source freely.

NOTE: HDMI port and audio ports are connected according to user needs, not

every be connected; but not reversed.

#### **Notes**

Pls use the machine as the instruction listed to keep the long use lifetime of the machine.

- 1. The machine should be placed at the spot far from the Damp, High-Temperature, Dusty, Erosive, and oxidative environment.
- 2. All parts will be free from the strong shake, hit, fall.
- 3. Touching the power adaptor with the wet hands is prohibited
- 4. Pls hold the power adaptor head and do not pull the power cord when cut off from the socket.
- 5. Pls turn the power off when the machine is not used for long time.
- 6. Pls do not open the cover and do not touch the inside parts
- 7. Pls use the original factory power adptor.

## hunter

Before power on, pls check the connection line carefully. And make sure that all interfaces are normally connected. The common trouble shooting way shows below:

Trouble Description	Cause and Ways to deal with		
	Check if the power adaptor head is truly and correctly		
	inserted the power socket.		
	2. Check the power switch if it is in on status.		
	1. Pls make sure that the TV is on and has been		
	connected with the machine.		
No Picture	2. Check if the signal source is on and well connected.		
No Picture	Check the system connection quality.		
	4. Check if the line is all good quality.		
	5. Check the cable quality		
	1. To try again to connect the cable to be free from the		
Obscure Picture	unsuccessful connection.		
	2. HDMI Cable Quality		



If your product does not work properly because of a defect in materials or workmanship, our Company (warrantor) will, for the length of the period indicated as 1 Years, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.