

Hunter Wireless 200M HDMI KVM Extender

USER MANUAL

9104-Hunter HTE-200EWHDK
Wireless 200M HDMI KVM Extender

www.hunterbharat.com



Product Introduction

Hunter Wireless HDMI KVM Extender 1080p - 200m extends high definition HDMI signals wirelessly from a source device to a display device up to 200 meters with the advanced application of transport protocol and wireless technology. It requires no cables between the transmitter (TX) and receiver (RX), making the installation easy and clean. Great for homes and offices.

Features

- Supports one to many without interference
- Connect up to 4 wireless receivers within the same location. No line of sight placement required and no difficulties transmitting/receiving signals through walls, ceilings, and floors. Each transmitter will scan for surrounding Wi-Fi 2.4/5GHz channels, automatically selecting an unoccupied frequency to avoid interference.
- Supports extended distance up to 200m wirelessly– Place your HDMI source from your HDMI display up to 200 meters away, transmitting wirelessly over 5GHz Wi-Fi bands, eliminating the need to run long cables through or around walls, ceilings or floors. www.hunterbharat.com
- Supports 1080p@60HZ with low latency– With a virtually undetectable max latency of 200ms, or 0.20 seconds, it is great for live TV, video games and sports. Connect all your High-Definition HDMI devices (cable box, computer, video game console, etc.) and enjoy 1080p@60Hz resolution. (When you are displaying Videos, it even supports full 4K@30HZ resolution)
- Supports USB firmware update capabilities– Download Firmware updates via USB to improve the quality, functionality and usability of this extender
- Supports KVM function-You can use a set of keyboard, mouse, monitor to control wireless extenders.
- Supports One-way IR control

Specifications

HDMI Transmitter Input/Output Ports 1x HDMI port/1 x PC/1 x AUX

1x IR Transmitter/1 x HDMI port

HDMI Receiver Input/Output Ports 1x IR Receiver

1x HDMI port/2 x PC/1 x AUX

Wireless length between Rx and TX 200 meters

HDMI Input 1080p/720p/576p/576i/480p/480i

HDMI Output 1080p/720p/576p/576i/480p/480i

Power Supply DC 5 V 2 A

ESD Protection Human Body Model: $\pm 8\text{kV}$ (air-gap discharge)

$\pm 4\text{kV}$ (contact discharge)

Operating Temperature $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ / $32^{\circ}\text{F} \sim 104^{\circ}\text{F}$


Storage Temperature $-20^{\circ}\text{C} \sim 60^{\circ}\text{C}$ / $-4^{\circ}\text{F} \sim 140^{\circ}\text{F}$ Relative Humidity 20 ~ 90% RH (Non-condensing)

Dimension (L x W x H) 221x70x25(mm)



Resolution

Support 1080P@60Hz Full HD

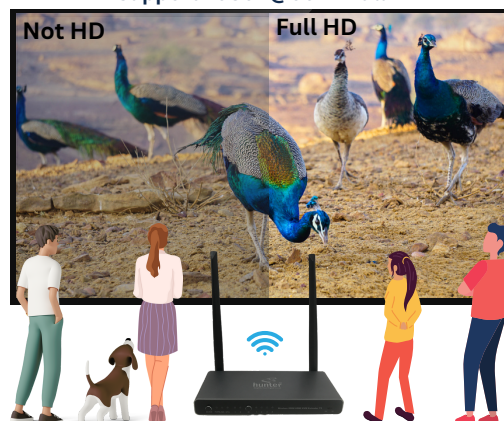

200m Stable Transmission



Applications



Home




Conference Room



Teaching

Operation Control & Functions

Transmitter - TX

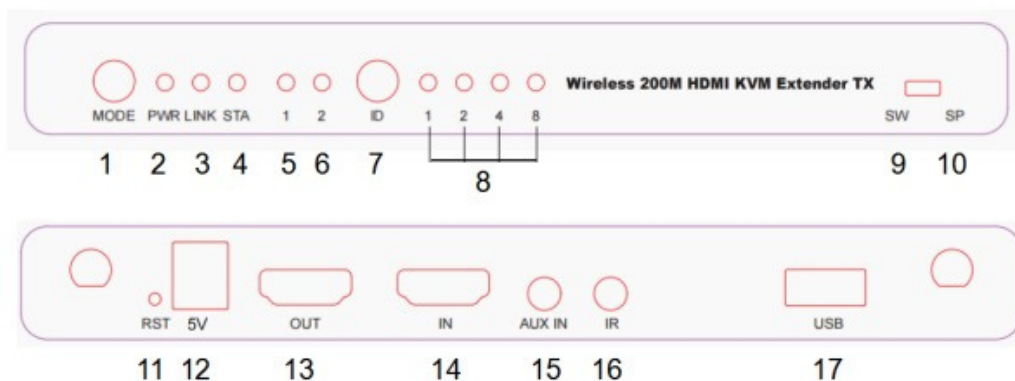

Light signal and button:


- 1 Mode button: Click to enable DHCP mode (lighting for mode 1), and long press to switch channel bit (lighting for mode 2).
- 2 Power light: Lighting when power is supplied.
- 3 Link (Ethernet) light: Lighting when Ethernet is connected.
- 4 STA (HDMI) light: Flashing when data is transmitting.
- 5 Mode 1 light (DHCP mode): Lighting on to enable DHCP when necessary. Please enable DHCP after LAN cable is connected to switch without DHCP embedded. It is possible to run DHCP on multiple TX at the same time, but only the one with stronger MAC ADDR hosts the DHCP.
- 6 Mode 2 light (Channel bit): Lighting on to adjust high-bit channel, and lighting off to adjust low-bit channel.
- 7 ID button: Click to switch channel ID.
- 8 Channel signal: Channel number is the total of what is light on.
- 9 Many-to-one mode: Display the screen of TX with the same channel ID, and pair with HDMI cable. It can support up to 8 to 1.
- 10 One-to-one and one-to-many modes: Direct connection to TX for 1 to 1 extending display. No channel ID should be set. It can support up to 1 to 4.
- 11 Reset: Long press to upgrade..

Port:

- 12 5V port: Requires 5V/2A power supply.
- 13 HDMI Output: Connects to monitor with HDMI port for loopback.
- 14 HDMI Input: Connects to your device (laptop or computer box).
- 15 AUX IN: Audio input to replace the audio from HDMI source.
- 16 IR out: Supports IR output for remote control.
- 17 USB port: Connects to your device for receive reverse control signals.



Receiver -RX

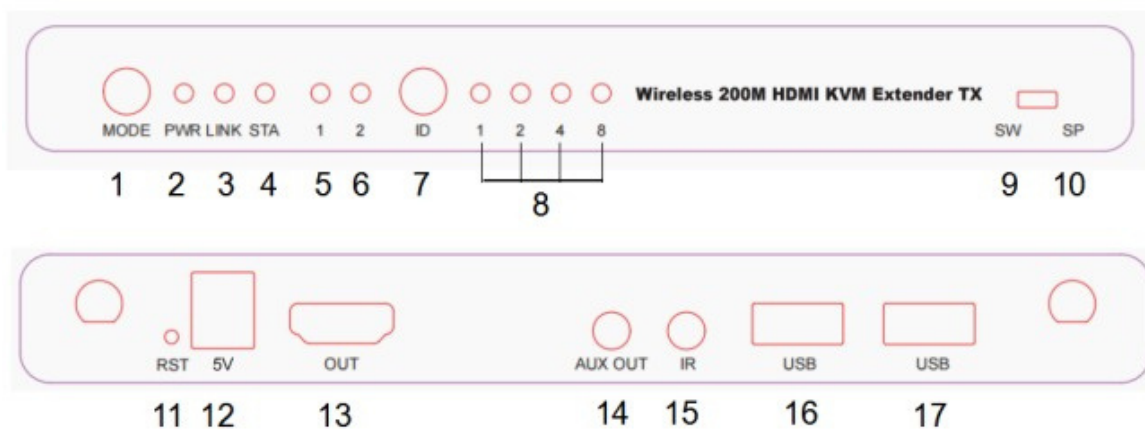

Light signal and button:

- 1 Mode button: Click to switch display mode (lighting for mode 1), and long press to switch channel bit (lighting for mode 2).
- 2 Power light: Lighting when power is supplied.
- 3 Link(Ethernet) light: Flashing when data is transmitting.
- 4 STA(HDMI) light: Lighting when HDMI cable is connected.
- 5 Mode 1 light (Display mode): Lighting off for Graphic Mode with shorter latency, and lighting on for Video mode with less package lost rate.
- 6 Mode 2 light (Channel bit): Lighting on to adjust high-bit channel, and lighting off to adjust low-bit channel.
- 7 Channel ID button: Click to switch channel ID.
- 8 Channel ID signal: Channel number is the total of what is light on.
- 9 Many-to-one mode: Display the screen of TX with the same channel ID, and pair with HDMI cable. It can support up to 8 to 1.
- 10 One-to-one and one-to-many modes: Direct connection to TX for 1 to 1 extending display. No channel ID should be set. It can support up to 1 to 4.
- 11 Reset: Long press to upgrade..

Port:

- 12 5V port: Requires 5V/2A power supply.
- 13 HDMI Output: Connects to monitor with HDMI port for display
- 14 AUX OUT: Audio output to other speakers. Note that HDMI output port sends audio simultaneously.
- 15 IR IN: Supports IR input for remote control.
- 16 & 17 USB port : Supports external keyboard and mouse connection for remote control.



Channel Adjustment

Low-bit channel 1-15: Press ID button to switch channel from 1 to 15.



Advanced section for more channels


If 15 channels are not enough for your circumstances, up to 255 channels are provided.

The channel ID more than 15 is “high bits * 16 + low bits”.


1. High-bit channel adjustment

(1) Long press MODE button to light on Mode 2 signal to adjust high-bit channel.

(2) Press ID button to change high-bit channel, which defines the adjustment range of low-bit signals. High-bit adjustment

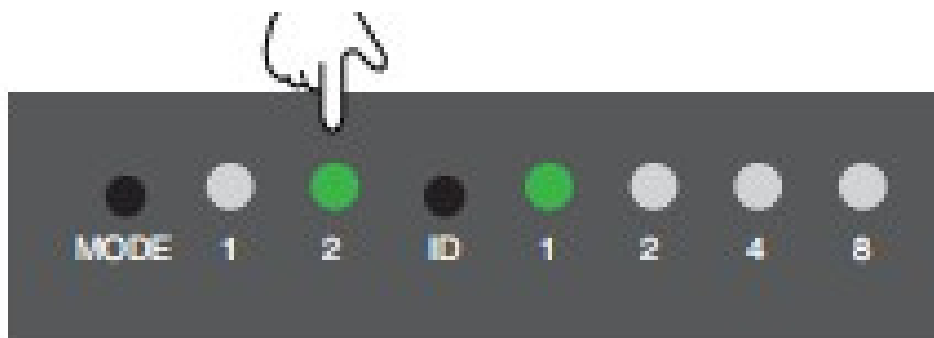


High-bit signals define the adjustment range of low-bit signals

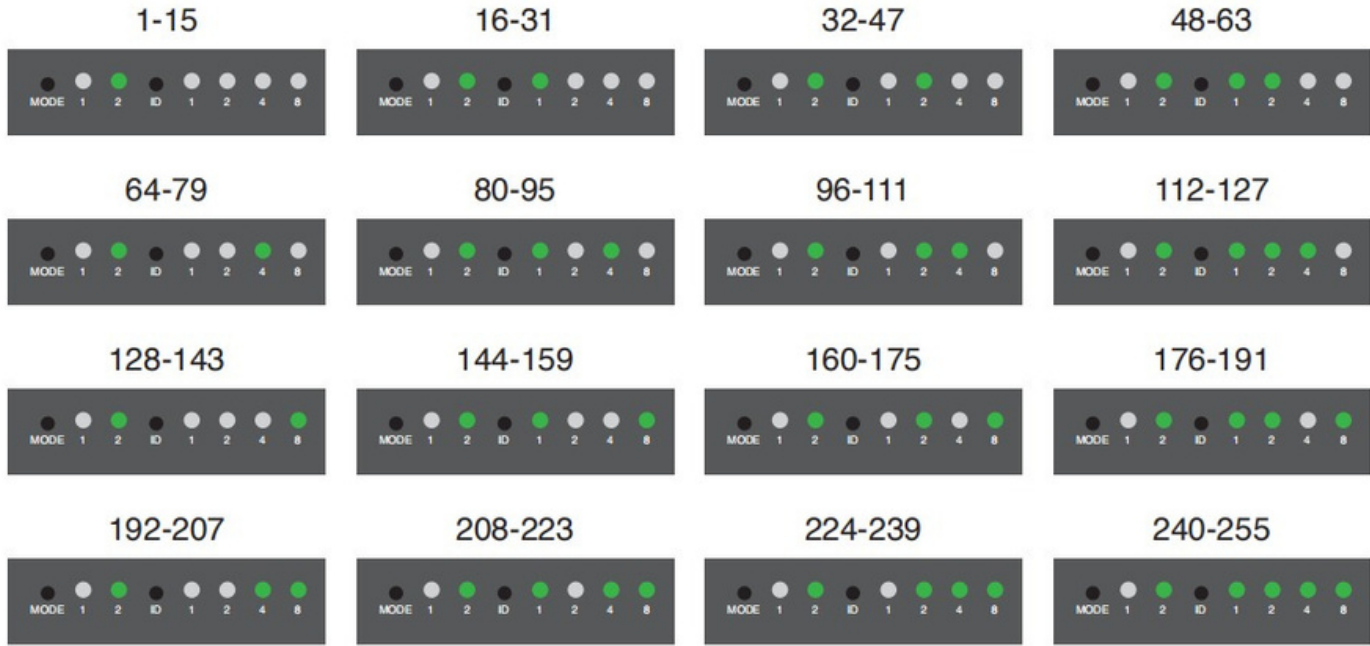


2. Example for channel 16-32:

- (1) Long press MODE button to light on Mode 2 signal to adjust high-bit channel.
- (2) Click ID button to 1. High-bit channel 1 makes low-bit channel adjustment start from channel 16. (High-bit channel 2 makes low-bit channel adjustment start from 32. So as high-bit channel 3-15 adjust low-bit channel from 46-255.)
- (3) Long press MODE button again to switch to low-bit adjustment.
- (4) Click ID button to switch channel from 16-32.

To start low-bit channel from 16-31, switch to high-bit adjustment and press ID button to 1.

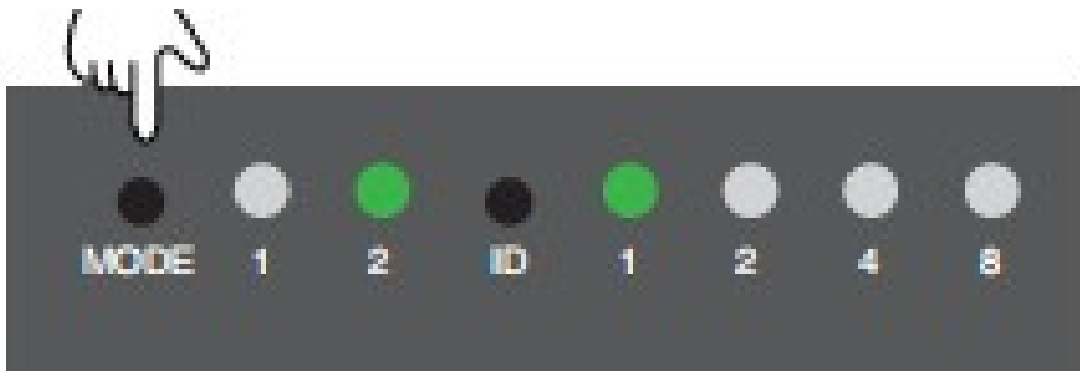

Switch back to low-bit adjustment and change channel ID by ID button

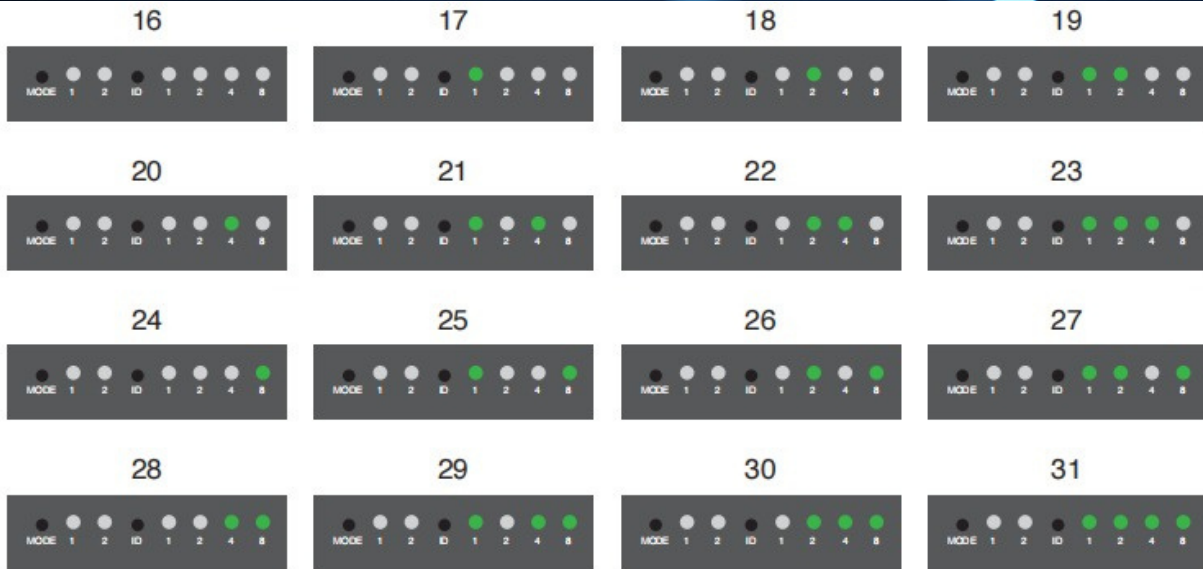


Note: Only channel 1-15 are adjustable when high-bit channel is 0, which means not allowing the adjustment of high-bit channel 0 and low-bit channel 0 simultaneously.

Installation

Splitter Mode Display (1 to 1):

1. Position the toggle switch to Splitter Mode on both RX and TX.
2. Connect power to 5V/2A and a monitor to display output on RX.
3. Connect RX and TX by the USB-A data cable to pair.
4. After pairing, connect power to 5V/2A, a monitor for loopback, and a device to input on TX.

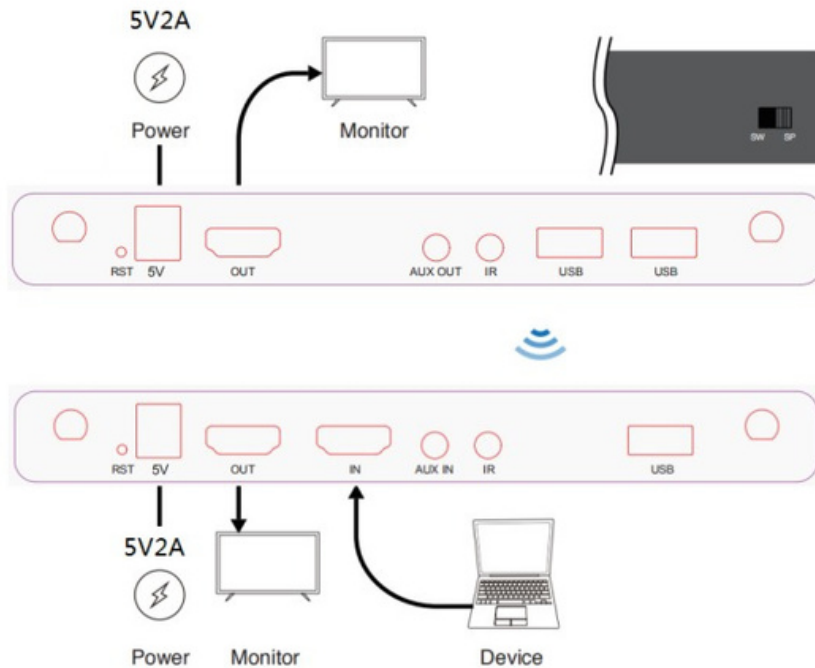


*Troubleshooting guide: If there's no signal on the monitor connected to RX, please make sure RX and TX (1) are both switched to Splitter mode and (2) have been paired

Switch Mode Display (1 to N, N to 1):

1. Position the toggle switch to Switch Mode on both RX and TX.
2. Connect power to 5V/2A and a monitor to display output on RX.
3. Connect RX and TX by the USB-A data cable to pair.
4. After pairing, connect power to 5V/2A, a monitor for loopback, and a device to input on TX.
5. Set RX and TX to the same channel ID.

* Note: Every TX under the same network should be set to different channel ID.

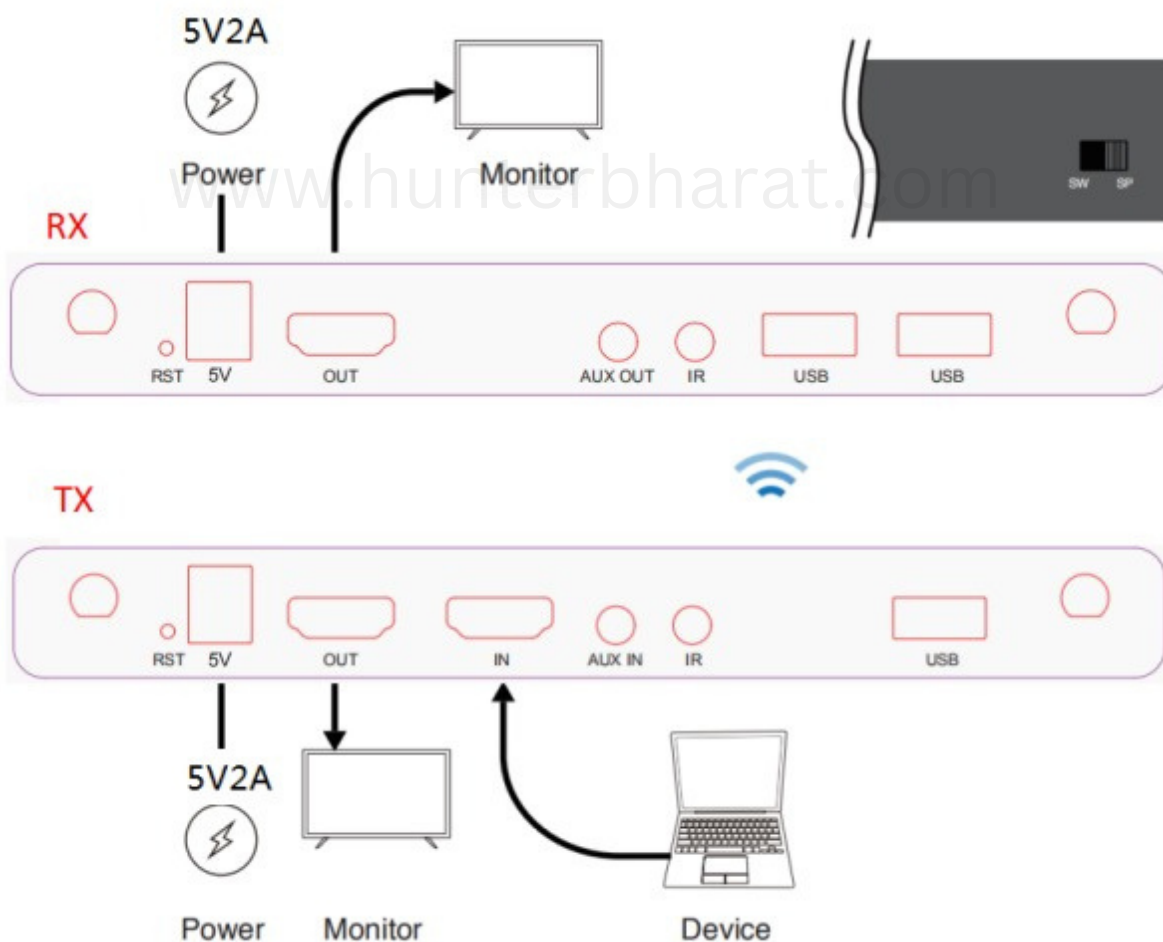


* Troubleshooting guide: If there's no signal on the monitor connected to RX, please make sure RX and TX (1) are both switched to Switch Mode, (2) have been paired together, and (3) are set to the same channel ID.

Installation of Remote Control

Two flexible methods for remote control are supported: IR control, USB Keyboard/Mouse control. The connection examples are only for the remote control function, please arrange other display kits depending on your needs.


1. IR control:

Equip IR kit on RX and TX to control the device connected to TX from RX. The receiver is for IR input and the transmitter is for IR output.

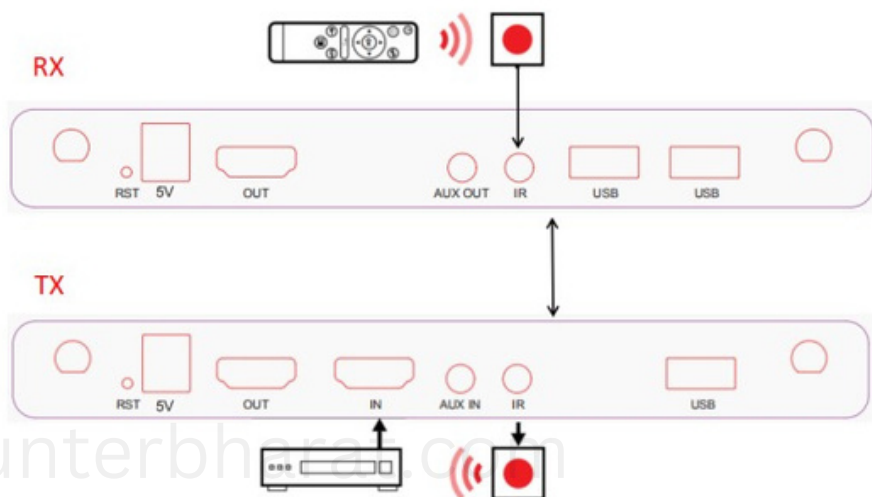

2. USB Keyboard/ Mouse control:


Connect keyboard/ mouse to RX to reverse control the computer connected to TX via USB cable. The receiver is for keyboard/ mouse input and the transmitter is for PC reverse control output.

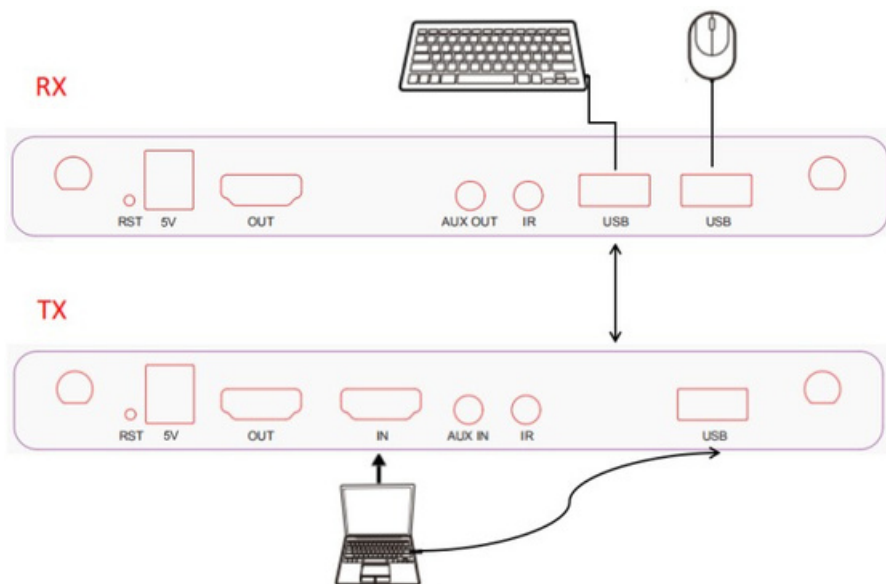


* Troubleshooting guide: If unable to reverse control, please make sure the monitor connected to the receiver shows the IP address. If there's no IP address shown, please enable DHCP on the transmitter connected to the same network as the receiver.

Installation of Audio Input and Output


1. HDMI input and HDMI output

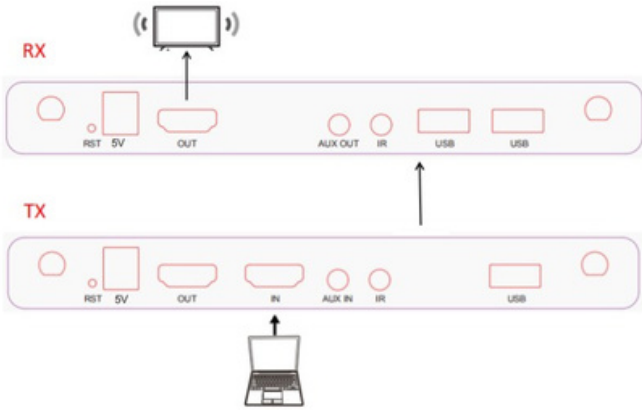


4. HDMI/ AUX input and HDMI/ AUX output

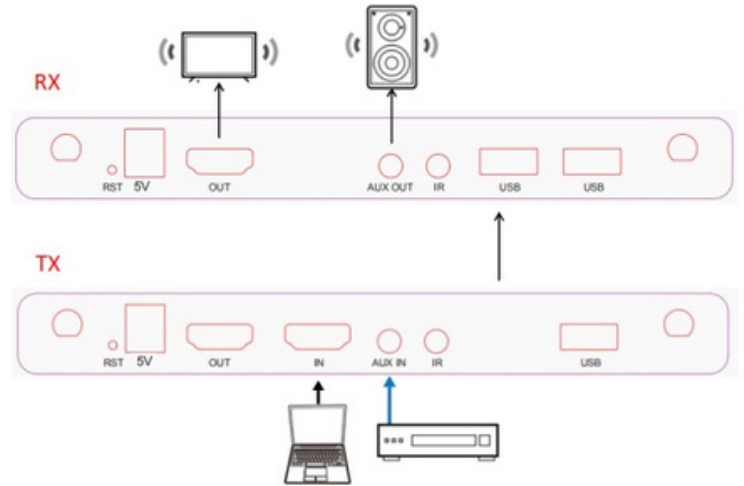


2. AUX input and HDMI output

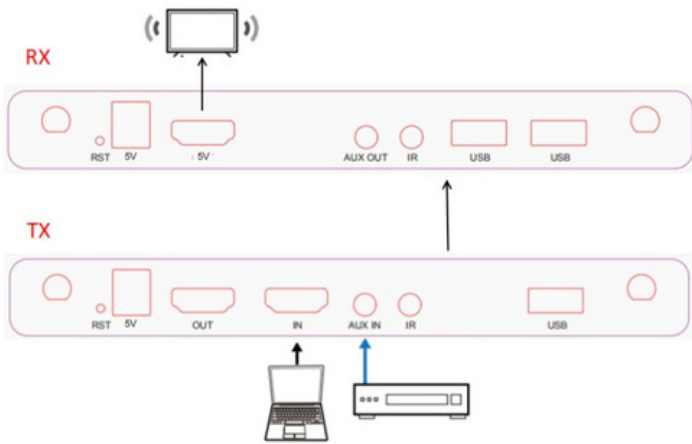


5. HDMI input and AUX output

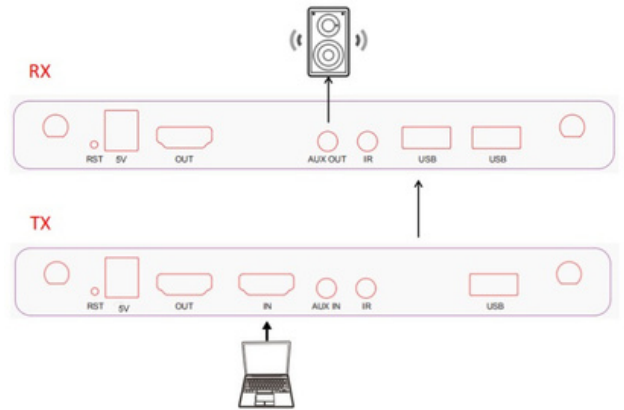

3. HDMI input and HDMI/ AUX outp

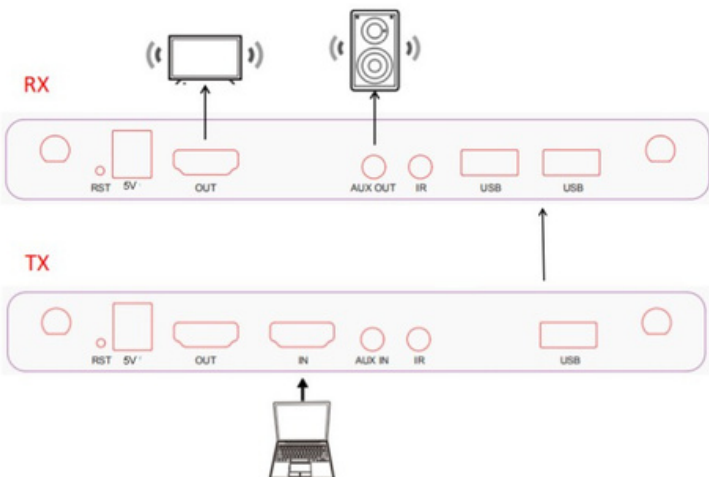


6. AUX input and AUX output

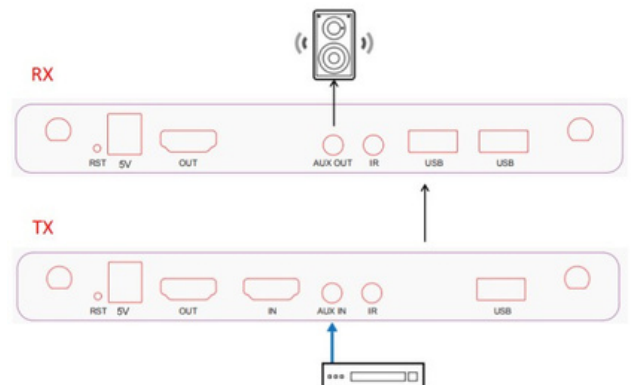


Configuration Examples


Extender (1 to 1)

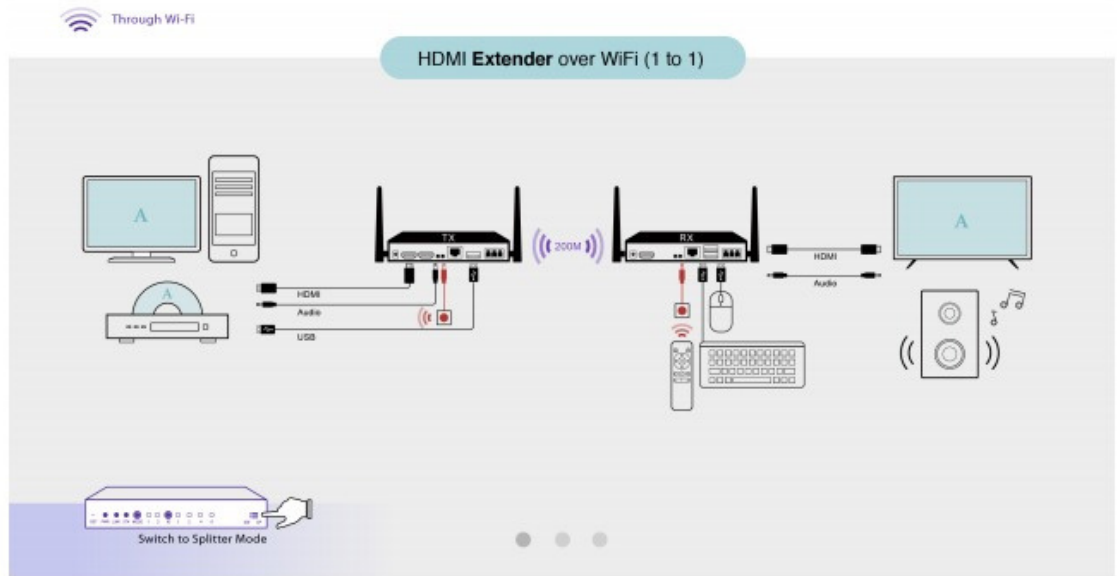

Splitter (1 to N)

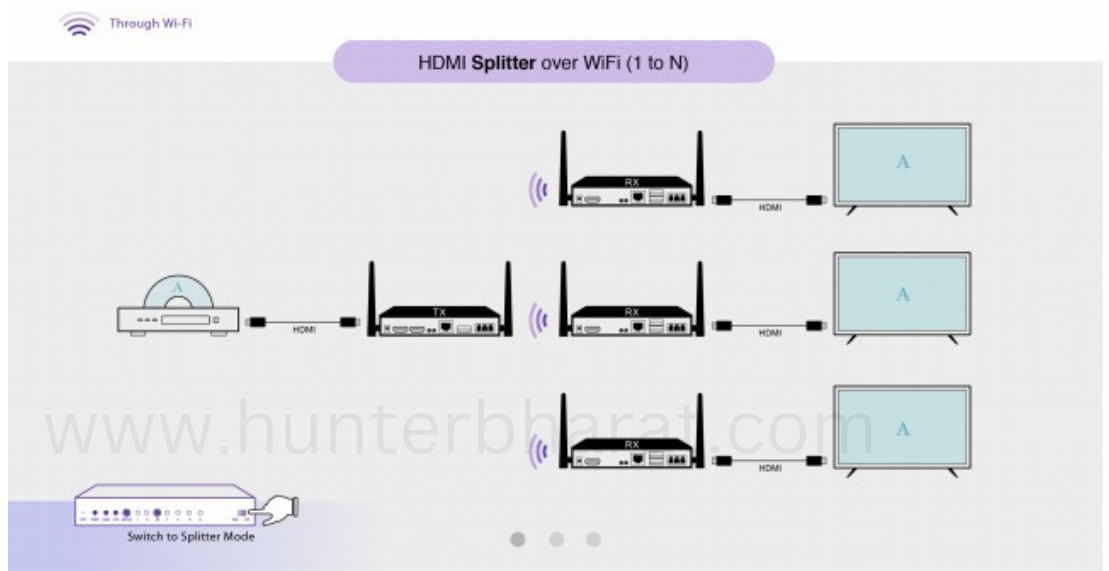

Switcher (1 to 1, N to 1)

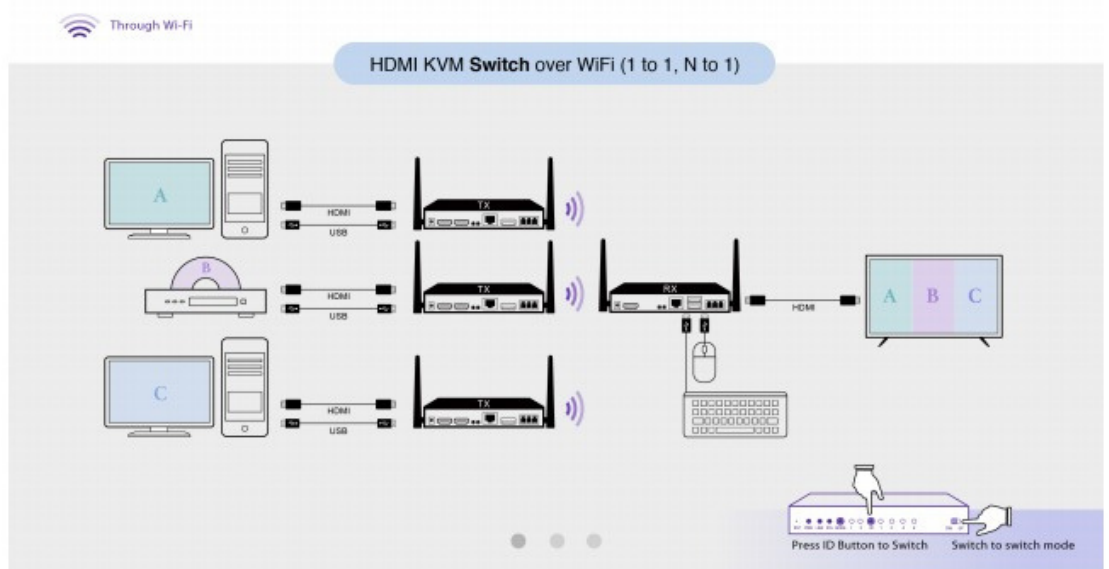

Wideband IR (30KHz---60KHz)

To control the source: IR BLASTER (TX)




To control the source: IR Receiver (RX)



Plug IR Blaster into IR TX port of transmitter unit; place blaster in front of the IR eye of the source.

Plug IR Receiver into IR RX port of receiver unit; place receiver at or near display.

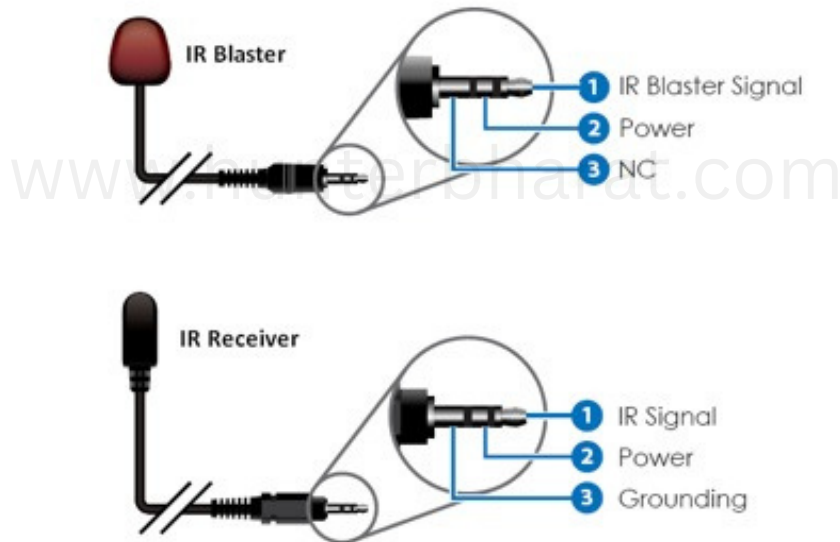

Package Content



Hunter HDMI TX



Hunter HDMI RX



Windband IR Tx Cable



Windband IR Rx Cable



USB Cable



5V 2A DC Power Supply Adapter

Support list of display input		4K Model
TX HDMI input and RX HDMI output		1.11534.0
TX HDMI input	RX HDMI output	HDMI loopback output
640x480 60Hz	800x600 60Hz	640x480 60Hz
800x600 60Hz	800x600 60Hz	800x600 60Hz
1024x768 60Hz	1024x768 60Hz	1024x768 60Hz
1280x720 60Hz	1280x720 60Hz	1280x720 60Hz
1280x720 50Hz	1280x720 60Hz	1280x720 50Hz
1280x768 60Hz	1280x768 60Hz	1280x768 60Hz
1280x800 60Hz	1280x800 60Hz	1280x800 60Hz
1280x960 60Hz	1280x960 60Hz	1280x960 60Hz
1280x1024 60Hz	1280x1024 60Hz	1280x1024 60Hz
1360x768 60Hz	1920x1080 60Hz	1360x768 60Hz
1400x1050 60Hz	1400x1050 60Hz	1400x1050 60Hz
1440x900 60Hz	1440x900 60Hz	1440x900 60Hz
1920x1200 60Hz	1920x1200 60Hz	1920x1200 60Hz
1600x1200 60Hz	1600x1200 60Hz	1600x1200 60Hz
1680x1050 60Hz	1680x1050 60Hz	1680x1050 60Hz
1920x1080 60Hz	1920x1080 60Hz	1920x1080 60Hz
1920x1080i 60Hz	1920x1080 60Hz	1920x1080i 60Hz
1920x1080 50Hz	1920x1080 60Hz	1920x1080 50Hz
1920x1080i 50Hz	1920x1080 60Hz	1920x1080i 50Hz
3840x2160 30Hz	1920x1080 60Hz	3840x2160 30Hz
4096x2160 30Hz	1920x1080 60Hz	4096x2160 30Hz

Support list of display input		1080P Model
TX HDMI input and RX HDMI output		1.11194.0
TX HDMI input	RX HDMI output	HDMI loopback output
640x480 60Hz	800x600 60Hz	800x600 60Hz
800x600 60Hz	800x600 60Hz	800x600 60Hz
1024x768 60Hz	1024x768 60Hz	1024x768 60Hz
1280x720 60Hz	1280x720 60Hz	1280x720 60Hz
1280x720 50Hz	1280x720 60Hz	1280x720 60Hz
1280x768 60Hz	1280x768 60Hz	1280x768 60Hz
1280x800 60Hz	1280x800 60Hz	1280x800 60Hz
1280x960 60Hz	1280x960 60Hz	1280x960 60Hz
1280x1024 60Hz	1280x1024 60Hz	1280x1024 60Hz
1360x768 60Hz	1920x1080 60Hz	1920x1080 60Hz
1400x1050 60Hz	1400x1050 60Hz	1400x1050 60Hz
1440x900 60Hz	1440x900 60Hz	1440x900 60Hz
1920x1200 60Hz	1920x1200 60Hz	1920x1200 60Hz
1600x1200 60Hz	1600x1200 60Hz	1600x1200 60Hz
1680x1050 60Hz	1680x1050 60Hz	1680x1050 60Hz
1920x1080 60Hz	1920x1080 60Hz	1920x1080 60Hz
1920x1080i 60Hz	1920x1080 60Hz	1920x1080 60Hz
1920x1080 50Hz	1920x1080 60Hz	1920x1080 60Hz
1920x1080i 50Hz	1920x1080 60Hz	1920x1080 60Hz